

SHS40 FlyHawk 4-Place Intercom Instructions:

The two jacks are standard plug in jacks that can be used with a dash mounted RF Radio for Receiving and Transmitting. If you have a portable Two Way radio, then you will need the optional jack adapters (not included with intercom) to fit your radio.

The unit runs on one 9V Alkaline Battery (not included) or the 12V DC Cigarette Lighter plug on the side of the unit using the optional Auxiliary power cord adapter (Part Number: LDSM12DC).



MUTE: The adjustable MUTE knob (SQUELCH) allows you to automatically turn the unit on when you or a passenger talk into the microphone. Adjust the sensitivity by turning the knob clockwise. Works with mixed headsets of same impedance.

VOLUME: Adjustable volume control. When not in use, turn the volume knob all the way to OFF by rotating counter clockwise.

The toggle switch functions:

Radio: Talk on the radio with the tower (only Pilot and Copilot will be able to communicate with tower)

Pilot: Pilot isolate switch. Talk between Pilot and Co-Pilot only

Intercom: Talk with all passengers.

LED Light: Flashes when the toggle switch on RADIO and you click the PTT (Push To Talk) red button.

IN: Music in: For plugging your MP3/ Iphone / or any other audio (music) source. Note: Music in volume is controlled by music source only. Intercom communication between headsets, overrides the music volume, but music does not mute while talking over intercom. You can adjust the intercom volume up using the volume knob.

OUT: Record Out: For plugging in a recorder to record your communication